

Equipment Controls

TV Mode Button

Button used to control TV Functions.

Setup

Button used to program remote for different devices.

Set Top Box Mode Button

Press to control Set Top Box Functions.

Input Button

Press to change the input on the TV. (Press TV Mode Button First)

Master Power Button

Press to turn off device that your remote is currently in control of.

Auxiliary Mode Button

Press to control Aux Device Functions.

Navigation Controls

Info Button

Press to bring up information on the current program. (Twice for more information)

Guide Button

Press to cycle through the on screen guide and favorites lists.

Volume

Press to Increase/Decrease Volume.

Skip Back Button

Press to skip back 60 seconds.

Menu Button

Press to bring up the Menu Bar.

Exit Button

Press to exit to live TV.

Channel Button

Press to change channels & scroll a full page in the Guide.

Last Button

Press to change to previously tuned channel.

Skip Forward Button

Press to skip forward 30 seconds.

DVR Controls

Pause Button

Press to pause current video.

Record Button

Press to record in live TV or the Guide.

Rewind Button

Press to rewind video in 4x, 15x, 60x or 300x speed

Record-It Button

Press to access recordings menu.

Stop Button

In recorded video, stops playback.

Fast Forward Button

Press to fast forward video in 4x, 15x, 60x or 300x speed

Play Button

Press to play current video.

Navigation Controls

OK Button

Press to confirm a command.

Arrow Buttons

Press to move around a menu.

Mute Button

Press to turn off audio.

Nsight
TELSERVICES®

2711 East Frontage Road
Abrams, WI 54101


920.826.5215

122 South Saint Augustine Street
Pulaski, WI 54162

920.822.3201


Nsight
TELSERVICES®

Turning Television ON/OFF

1. Press  to set remote to control your television.

2. Press  to turn ON/OFF your television.

Changing Cable Channels

1. Press  to set remote to change cable channels.