



HOW TO CONNECT AND DISCONNECT YOUR TELEPHONES

Warning:

Customers with a pacemaker should not connect or disconnect telephones. Telephones have voltages ranging from 48 VDC to 105 VAC. To avoid electrical shock, use insulated tools and protective clothing. Do not touch grounded objects or appliances while working on telephone equipment.

Connecting Desk Telephones

Desk telephones may be connected to any of the following modular jacks as indicated in Illustrations 1 through 4. Nonstandard adapter jacks for desk phones are shown in Illustrations 5 and 6.

In each case, simply match the plug at the end of the telephone cord and insert.

Disconnecting Desk Telephones

Simply squeeze the clip on the plug and pull out of the jack.

Connecting Wall Telephones

Simply match the holes in the back of the telephone with the

rivets on the wall mounting as shown in Illustration 7. Push the telephone lightly against the mounting while sliding it down into place over the rivets.

Disconnecting Wall Phones

Gently slide the telephone up to lift it off the rivets. Pull the telephone away from the wall mount.

